


# Autonics

## Motor Driver(5-Phase microstepping driver)

### MD5-HD14-2X/3X

M A N U A L

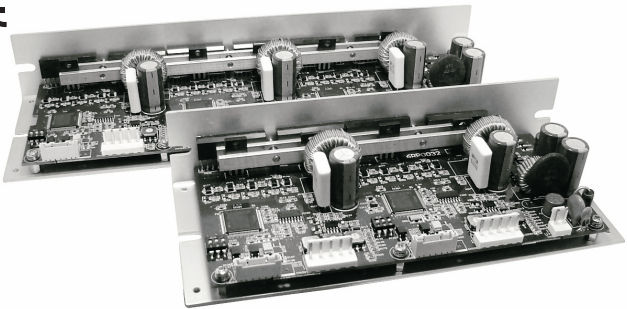

Thank you very much for selecting Autonics products.  
For your safety, please read the following before using.

### Caution for your safety

※Please keep these instructions and review them before using this unit.

※Please observe the cautions that follow:

**Warning** Serious injury may result if instructions are not followed.

**Caution** Product may be damaged, or injury may result if instructions are not followed.

※The following is an explanation of the symbols used in the operation manual.

**Caution** : Injury or danger may occur under special conditions.

### Warning

- In case of using this unit with machinery(Nuclear power control, medical equipment, vehicle, train, airplane, combustion apparatus, entertainment or safety device etc), it is required to install fail-safe device.**  
It may cause a fire, human injury or give an electric shock.
- Installation, connection, operation, control, maintenance should be carried out by person who has been qualified.**  
It may cause a fire, electric shock or human injury.
- Please use DC power with reinforced insulating the primary and secondary part for the DC power product.**  
It may give an electric shock.
- Please install this unit after consider countplan against power failure.**  
It may cause human injury or damage to product by releasing holding torque of motor.
- Do not use this unit outdoors or place where there are explosiveness, flammable, corrosive gas, water and frequent vibration etc.**  
It may cause a fire or give an electric shock.
- Do not disassemble and modify this unit, when it is required, please contact us.**  
It may cause a fire, give an electric shock or damage to product.
- Please install board type product with protection equipment.**  
It may cause a fire.

### Caution

- Power input voltage must be used within rated specification and power line should be over than AWG 18(0.75mm<sup>2</sup>).**  
It may cause a fire or give an electric shock.
- Please check the connection before supplying the power.**  
It may cause a fire or give an electric shock, dam age to product.
- Please turn off the power when power is failed.**  
It may cause human injury or damage to product due to sudden movement by recovering from power failure.
- Do not touch during the operation or after a while of operation.**  
It may cause a burn due to high temperature in surface.
- The emergency stop should be enabled during the operation.**  
It may cause human injury or damage to product.
- Please apply power after checking control input signal.**  
It may cause human injury or damage to product by sudden movement.
- Do not turn on the HOLD OFF signal input while it is maintaining vertical position.**  
It may cause human injury or damage to product by releasing holding torque of motor.
- Please install a safety device when it is required to remain the vertical position after turning off the power.**  
It may cause human injury or damage to product by releasing holding torque of motor.
- Please check if HOLD OFF signal input is ON when it is required to set the output manually.**  
It may cause human injury by sudden movement.
- Please stop this unit when mechanical problem is occurred.**  
It may cause a fire or human injury.
- Do not touch the terminal when during the insulation dielectric strength test or insulation resistance measurement.**  
It may give an electric shock.
- Please observe rated specification.**  
It may cause a fire, give an electric shock or damage to product.
- In cleaning the unit, do not use water or an oil-based detergent.**  
It may cause a fire or give an electric shock.
- Please separate as industrial waste when disuse this unit.**

※The above specifications are subject to change and some models may be discontinued without notice.

### Specifications

Model	MD5-HD14-2X	MD5-HD14-3X
Power supply*1	20-35VDC 5A MAX. (-10%, +20%)	20-35VDC 7A MAX. (-10%, +20%)
RUN current	0.4~1.4A/Phase	
RUN method	Bipolar constant current pentagon drive	
Resolution	1,2,4,5,8,10,16,20,25,40,50,80, 100,125,200,250 of microstep	
Pulse width	0.5μs	
Pulse DUTY	Max. 50%	
Rising/falling time	Max. 120ns	
Input pulse frequency	Max. 1MHz	
Pulse input voltage	High: 4V-8VDC, Low: 0-0.5VDC	
Input inner resistance	270Ω(CW, CCW), 390Ω(HOLD OFF)	
Environ- ment	Ambient temperature	0 ~ 40℃, Storage: -20 ~ 60℃
	Ambient humidity	30 ~ 85%RH, Storage: 30 ~ 85%RH
Unit weight	Approx. 292g	Approx. 411g




\*1: There is torque difference by input power.

※Environment resistance is rated at no freezing or condensation.

### Dimensions

#### MD5-HD14-2X




(Unit : mm)

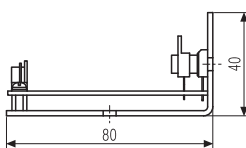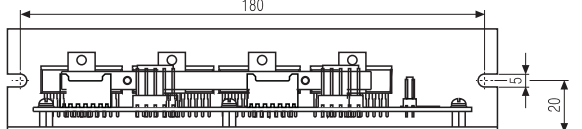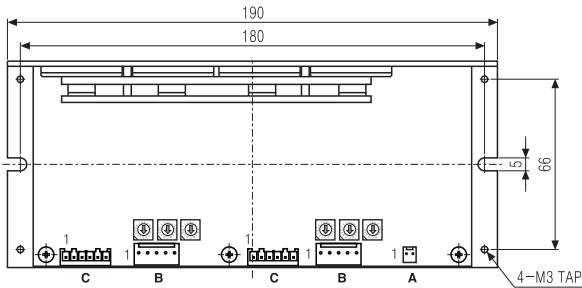

\*Accessory connector specification

Accessory	Connector		Qty
	Manufacturer	Model No.	
A Power 2P Housing	Yeonho electronics	YH396-02V	1
B Motor 5P Housing	Yeonho electronics	YH396-05V	2
C Signal 6P Housing	JST	XAP-06V-1	2
- Power/Motor Terminal Pin	Yeonho electronics	YT396	12
- Signal Terminal Pin	JST	SXA-001T-P0.6	12

#### MD5-HD14-3X

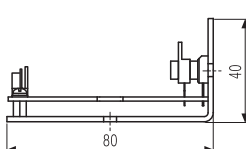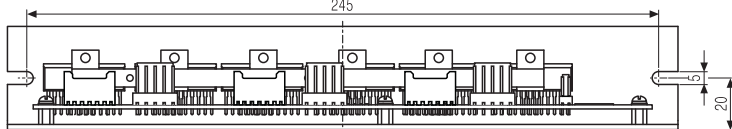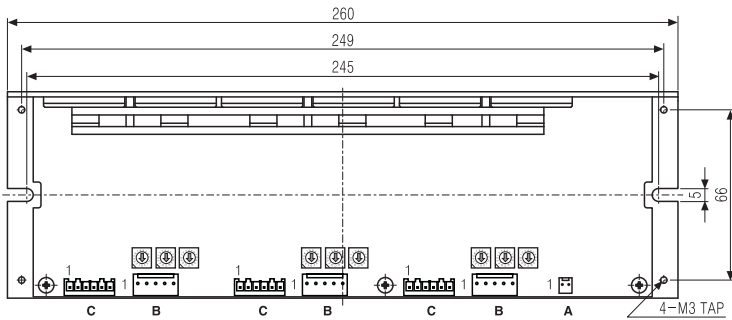


\*Accessory connector specification


Accessory	Connector		Qty
	Manufacturer	Model No.	
A Power 2P Housing	Yeonho electronics	YH396-02V	1
B Motor 5P Housing	Yeonho electronics	YH396-05V	3
C Signal 6P Housing	JST	XAP-06V-1	3
- Power/Motor Terminal Pin	Yeonho electronics	YT396	17
- Signal Terminal Pin	JST	SXA-001T-P0.6	18

### Time charts

#### 2 Pulse input

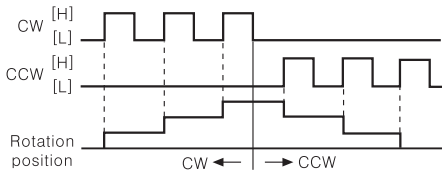


#### 1 Pulse input

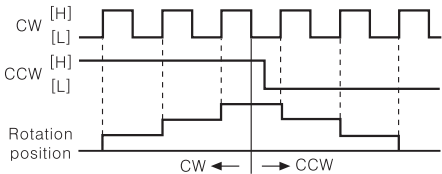

**Note)** Do not input CW, CCW signals at the same time in 2 Pulse input type.  
: It may not work properly if another direction signal is supplied when one of them is ON.

### Input • Output diagram

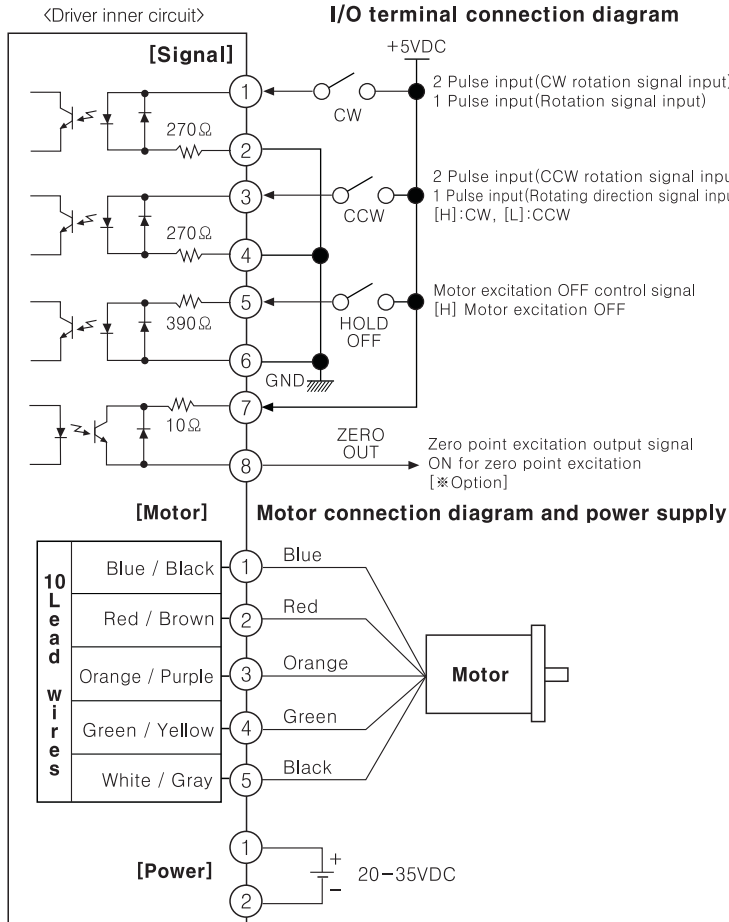

**Note)**Add external resistance when power for pulse from the external of the unit exceeds +5V.

### Function

#### Selectable function switch

No	Name	Function	Switch position	
			ON	OFF
1	TEST	Self diagnosis function	30rpm rotation	Normal
2	1/2 CLK	Pulse input method	1 Pulse input	2 Pulse input
3	CURRENT DOWN	Auto Current Down	Not use	Use

#### TEST

- It rotates at a speed of 30rpm in Full Step and it is changed depending on resolution.
- It rotates to CCW in 1 Pulse input method and CW in 2 Pulse input method.

#### 1/2 CLK

- Pulse input method selection
- 1 Pulse method : Input pulse signal input in CW and rotating direction signal in CCW. It rotates to CCW when [L] and CW for [H].
- 2 Pulse method : Motor is rotated to CW when input pulse in CW and to CCW when input pulse in CCW.

#### CURRENT DOWN

- A function to reduce RUN current according to the setting rate of STOP current switch when motor stops in order to reduce motor's heat generation.
- Current is reduced from approx.500[ms] after the last pulse input.

#### Setting of RUN current

Switch No	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
Current (A/Phase)	0.4	0.5	0.57	0.63	0.71	0.77	0.84	0.9	0.96	1.02	1.09	1.15	1.22	1.27	1.33	1.4

- RUN current is phase current provided to 5-phase stepping motor.
- RUN current is set under the rated current, or, it may cause loss of torque.
- Torque is increased as raise RUN current, but, motor emits heat too much, select depending on the load.

#### Setting of STOP current

Switch No	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
%	27	31	36	40	45	50	54	58	62	66	70	74	78	82	86	90

- It sets current when motor is at standstill.
- Set STOP current is percentage of RUN current.
- It is operated when HOLD OFF is [L]. Current supplied to each phase is cut in [H], auto CURRENT DOWN function does not work.

#### Zero point excitation output signal(ZERO OUT)[※Option]

- It indicates the initial step of excitation status of stepping motor and rotation position of motor axis from previously set zero.
- ZERO OUT means the initial status of motor excitation(STEP 0), it outputs per 7.2° of rotation in Full Step.(It outputs 50times per 1 rotation of motor.)  
Ex) Full step : It outputs one time when input 10 pulse.  
20 division : It outputs one time when input 200 pulse.

#### HOLD OFF function

- HOLD OFF is [H], the excitation is released.
- HOLD OFF is [L], the excitation is in a normal status.
- It rotates motor axis by external force or is used for manual positioning.
- Input H/L means ON/OFF of photocoupler in a circuit.

#### Setting microstep(Microstep : Resolution)

Switch No	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
Resolution	1	2	4	5	8	10	16	20	25	40	50	80	100	125	200	250

#### Setting resolution

※It drives a motor dividing basic step angle(0.72°) by setting value of 5-phase stepping motor.

※The calculation formula of divided step angle is as below.

$$\text{Rotation angle of 5-phase stepping motor} = \frac{\text{Basic step angle}(0.72^\circ)}{\text{Resolution}}$$

- When resolution is changed during the operation of motor, it may cause a step-out of motor.

### Caution for using

- Caution for signal input
  - Do not input CW, CCW signal at the same time in 2 Pulse input type. It may not work properly if another direction signal is supplied when one of them is ON.
  - Current value of power supply in specifications is max.input of driver.
  - Use power enough to supply RUN current for power input.
- Caution for wiring
  - Use Twist pair(Over 0.2mm<sup>2</sup>) for the signal wire should be shorter than 2m.
  - Use electric wire of AWG 18(0.75mm<sup>2</sup>) for motor (when extend) and power connection.
  - Check the power polarity before the operation.
- Caution for installation
  - In order to increase heat protection efficiency, keep the heat sink as close as possible to metal panel and keep it well-ventilated.
  - Excessive heat generation may occur on Driver. Keep the heat sink under 80℃ when installing the unit. (In case it is over 80℃, forcible cooling shall be required.)
- Caution for using function switches
  - Self-diagnosis function is enable to test motor and driver when 250Hz pulse is outputted in [ON] status.
  - Check self-diagnosis switch is [OFF] before power ON, or, it may start to drive instantly when it is ON.
  - Auto CURRENT DOWN function is used to reduce RUN current when motor is at standstill to lower the heat generation automatically.
- Installation environment
  - It shall be used indoor
  - Altitude Max. 2000m
  - Pollution Degree 2
  - Installation Category II

※It may cause malfunction if above instructions are not followed.

### Major products

- Photoelectric sensors
- Fiber optic sensors
- Door sensors
- Door side sensors
- Area sensors
- Proximity sensors
- Pressure sensors
- Rotary encoders
- Connectors/Sockets
- Switching mode power supplies
- Control switches/Lamps/Buzzers
- I/O Terminal Blocks & Cables
- Stepper motors/drivers/motion controllers
- Graphic/Logic panels
- Field network devices
- Laser marking system(Fiber, CO<sub>2</sub>, Nd:YAG)
- Laser welding/soldering system
- Temperature controllers
- Temperature/Humidity transducers
- Tachometer/Pulse(Rate)/meters
- SSR/Power controllers
- Sensor controllers
- Display units
- Panel meters
- Counters
- Timers

**Autonics Corporation**  
http://www.autonics.com

Satisfiable Partner For Factory Automation

**HEAD QUARTERS:**  
18, Bansong-ro 513beon-gil, Haeundae-gu, Busan, Korea  
**OVERSEAS SALES:**  
#402-404, Bucheon Techno Park, 655, Pyeongcheon-ro, Wonmi-gu, Bucheon, Gyeonggi-do, Korea  
TEL: 82-32-610-2730 / FAX: 82-32-329-0728  
E-mail: sales@autonics.com

EP-KE-14-0013C