### **Autonics**

# TEMPERATURE CONTROLLER T4M/T4MA SERIES

U Ν



Thank you very much for selecting Autonics products. For your safety, please read the following before using.

## Caution for your safety

\*Please keep these instructions and review them before using this unit.

\*Please observe the cautions that follow;

▲ Warning Serious injury may result if instructions are not followed.

Product may be damaged, or injury may result if instructions are **⚠** Caution

\*The following is an explanation of the symbols used in the operation manual ▲caution: Injury or danger may occur under special conditions.

### **⚠** Warning

- 1. In case of using this unit with machineries(Nuclear power control, medical equipment, vehicle, train, airplane, combustion apparatus, entertainment or safety device etc), it requires installing fail-safe device, or contact us for information on type required. It may result in serious damage, fire or human injury
- 2. This unit must be mounted on panel.
- It may give an electric shock
- 3. Do not repair or checkup when power on.
- It may give an electric shock.
- 4. Do not disassemble and modify this unit, when it requires. If needs, please contact us.
- It may give an electric shock and cause a fire
- 5. This product is a combined use of 110/220VAC, please check the terminal when connect.


It may cause a fire

#### **⚠** Caution

- 1. This unit shall not be used outdoors.
- t might shorten the life cycle of the product or give an electric shock
- 2. When wire connection, No.20AWG(0.50mm  $^{2}$  ) should be used and screw bolt on terminal block with 0.74N · m to 0.90N · m strength. It may result in malfunction or fire due to contact failure.
- 3. Please observe specification rating.
- might shorten the life cycle of the product and cause a fire
- 4. Do not use the load beyond rated switching capacity of Relay contact.
- It may cause insulation failure, contact melt, contact failure, relay broken, fire etc 5. In cleaning the unit, do not use water or an oil-based detergent.
- It might cause an electric shock or fire that will result in damage to this product.
- 6. Do not use this unit at place where there are flammable or explosive gas, humidity, direct ray of the sun, radiant heat, vibration, impact etc. t may cause a fire or explosion
- 7. Do not inflow dust or wire dregs into inside of this unit.
- It may cause a fire or mechanical trouble
- 8. Please wire properly after checking the polarity of terminals when connect thermocouples.


It may cause a fire or explosion.

#### Dimensions

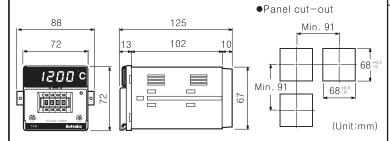

discontinued without notice.

#### Ordering information

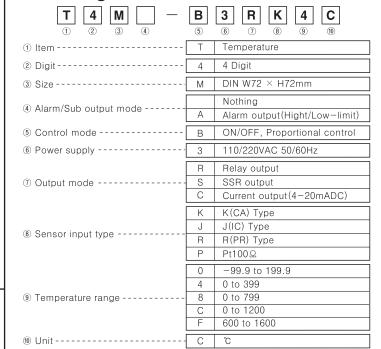


## Specifications

	Model		T4M	T4MA				
	Power supply		110/220VAC 50/60Hz					
1	Allowable voltage		90 to 110% of rated voltage					
	range		90 to 110% of fated voltage					
Ί.	Power consumption		3VA					
١	Display method		7 Segment LED Display					
١	Display accuracy		F•S ±0.5% rdg ±1digit□					
١	Setting method		Digital setting					
١	Setting accuracy		F • S ±0.5%					
١	Sensor input		Thermocouples:K(CA), J(IC), R(PR)/RTD:Pt100Ω					
	Input line resistance		Thermocouples:Max. 100Ω, RTD:Max. 5Ω per a wire					
	1 4	ON/OFF	Hysteresis:F•S 0.2 to 3% variable□					
	1		Proportional band:F • S 1 to 10% variable, Period:20sec. fixed					
		Alarm		F • S 1 to 10% variable				
	Reset VR range		F•S ±3% variable(revision of control deviation)					
	Control output		<ul> <li>Relay contact output:250VAC 3A 1c</li> <li>SSR output:24VDC ±3V 20mA max.</li> <li>Current output:4-20mADC(Load 600Ω max.)</li> <li>Alarm contact output:250VAC 1A 1a(T4MA)</li> </ul>					
Ί.	Self-diagnosis		Built-in burn out function					
١	Insulation resistance		Min. 100MΩ (at 500VDC)					
١	Dielectric strength		2000VAC 50/60Hz for 1 minute					
	Noise strength		±2kV the square wave noise(pulse width:1μs) by the noise simulator					
	Vibra -tion	Mechanical	0.75mm amplitude at frequency of 10 to 55Hz in each of X, Y, Z directions for 1 hour					
		Malfunction	0.5mm amplitude at frequency of 10 to 55Hz in each of X, Y, Z directions for 10 minutes					
	Shock	Mechanical	300m/s² (Approx. 30G) 3 times at X, Y, Z direction					
		Malfunction	100m/s² (Approx. 10G) 3 times at X, Y, Z direction					
	life cycle	Mechanical	Min.10,000,000 times					
		Electrical	Min.100,000 times(250VAC 3A resistive load)					
	Ambient temperature		-10 to 50℃(at non-freezing status)					
	Storage temperature		-25 to 65℃(at non-freezing status)□					
4	Ambient	humidity	35 to 85%RH					
	Weight		Approx. 399g	Approx. 425g				
- 1								

#### Connections

CURRENT OUT:

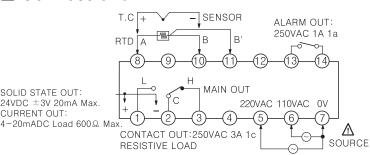


## Temperature range for each sensor

Model	T4M / T4MA					
Sensor		RTD				
input type	J(IC)	K(C	(A)	R(PR)	Pt100Ω	
Standard scale range (C)	399°C	799 399°C	1200°C	1600°C	399°C	

#### ON/OFF control

The drawing shows that the output turns on when the temperature is lower than the set value. (Heater ON) The output turns off when temperature is equal or higher than the set value. (Heater OFF)

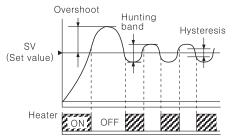


As like above picture, the control value is up and down by set value, it is called Hunting. And Overshoot is occurred at initial point when just

If the Hunting and Overshoot is less, it will be a good control.


## Hysteresis

The ON/OFF control has hysteresis due to reduce the chattering or noise affection. Generally make hysteresis bigger for compressor of cooler due to this reason.

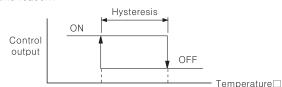

Ex)If temperature range is 0 to  $400^{\circ}$ C and hysteresis is  $0.5\%(2^{\circ})$ , therefore when the set value is 300°C. 301°C:OFF and 299°C:ON.

# Proportional control

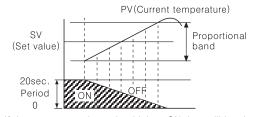

\*If the temperature is getting higher, ON time will be shorter.

Pulse output type of ON/OFF such as Relay output or SSR output(Voltage output) are ON/OFF repeatedly with constant cycle. When the PV and SV is the same, the output value will be 50% and ON/OFF time rate is 1:1.

## How to select ON/OFF or proportional by plug pin

• Control mode selection by plug pin






\* F : ON/OFF contro

#### Function

- ●BURN OUT detection function:
- Make the output OFF when the thermocouple is broken.
- Voltage output
- The output is 24VDC  $\pm$ 3V 20mA max for driving external SSR.
- •Direct/Reverse operation: Reverse operation is the output ON when the display value is lower than set value, Direct operation is for cooler. \*This product operates as reverse operation.

#### Load connection

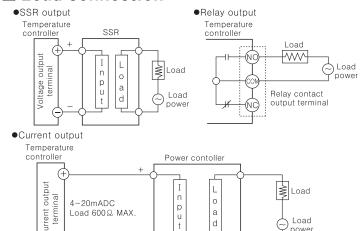

# Applications

Food	Packaging machinery, Banding machinery		
Plastic	Plastic machinery, Film making system, etc.		
Industry	Electric furnace, Auto soldering machine, Drying machine, etc		
Textile□	le□ Body press, Textile machine, Sizing machine		
Etc.□	Etc. ☐ Cement making machinery		

# Caution for using

- 1. Installation environment
- ①It shall be used indoor
- ②Altitude Max. 2000m
- ③Pollution Degree 2 ④Installation Category II
- 2. Please use the terminal(M3.5, Max.7.2mm) when
- connect the AC power source.
- 3. Please use separated line from high voltage line or power line in order to avoid inductive noise.
- 4. Please install power switch or circuit—breaker in order to cut power supply off.
- . The switch or circuit-breaker should be installed near by users
- 6. Do not use this product as Volt-meter or Ampere-meter, this is a temperature controller 7. Be sure to use compensating wire when extends wire from controller otherwise
- the temperature deviation will be occurred at the part where wires are connected 8. In case of using RTD sensor, 3wire type must be used.
- If it needs to extend the line, 3wires must be used with the same thickness as the
- line. It might cause the deviation of temperature if the resistance of line is
- 9. In case of making power line and input signal line close, line filter for noise protection should be installed at power line and input signal line should be shielded.
- 10. Keep away from the high frequency instruments. (High frequency welding machine & sewing machine, big capacitive SCR controller) 11. When change the control mode, please apply power after change the mode
- 12. Do not connect power line on No. 8, 9, 10 of terminal block for the sensor.
- \*It may cause malfunction if above instructions are not followed.

# Main products

Fiber optic sensors ■ Temperature/Humidity transducer ■ Door sensors SSR/Power controllers

Area sensors Timers ■ Panel meters
■ Tachometer/Pulse(Rate) ■ Proximity sensors Pressure sensors

Rotary encoders ■ Display units Connector/Sockets

■ Switching mode power supplies ■ Control switches/Lamps/Buzzers

I/O Terminal Blocks & Cables ■ Stepper motors/drivers/motion controllers

■ Graphic/Logic panels

Field network devices ■ Laser marking system(Fiber, CO₂, Nd;YAG)

Autonics Corporation http://www.autonics.com Satisfiable Partner For Factory Automation ■ HEAD QUARTERS: eon-ail, Haeundae-au, Busan, Korea

18, Bansong-ro 513beon-gil, Haeundae-gu, Busan, Korec

■ OVERSEAS SALES:
#402-404, Bucheon Techno Park, 655, Pyeongcheon-ro,
Wonmi-gu, Bucheon, Gyeonggi-do, Korea
TEL: 82-32-610-2730 / FAX: 82-3-239-0728

■ E-mail: sales@autonics.com

EP-KE-03-0075B