


MD5-HD14-2X, 3X

Low noise, low vibration multi axis 5-phase stepper motor driver

■ Features

- Simultaneous operation of 2, 3-axis by single 20-35VDC
- Small, light weight and advanced quality by custom IC and surface mounted circuit
- Realizing low noise, low vibration rotation with microstep-driving
- Low speed rotation and high accuracy controlling with microstep-driving
- Max. resolution - 250 division : In case of 5-phase stepper motor of which basic step angle is 0.72° , it enables to control up to 0.00288° per pulse
- Includes auto current down and self-diagnosis function
- Photocoupler input insulation method to minimize the effects from external noise

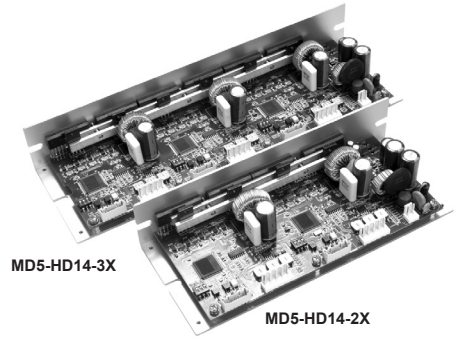

⚠ Please read "Caution for your safety" in operation manual before using.



■ Ordering information

MD 5 - H D 14 - 2X

Item	MD	5	-	H	D	14	-	2X		
Motor phase									5	5-Phase
Step type (Resolution)									H	Micro step(250 divisions)
Power supply									D	20-35VDC
RUN current									14	1.4A/Phase
Axis									2X	2-axis
									3X	3-axis
									MD	Motor Driver

※Bulit-in zero point excitation output signal is optional.

■ Specifications

Model	MD5-HD14-2X	MD5-HD14-3X
Power supply	Max. 20-35VDC 5A (-10%, +20%) ^{※1}	Max. 20-35VDC 7A (-10%, +20%)
RUN current	0.4 to 1.4A / Phase	
RUN method	Bipolar constant current pentagon drive	
Basic step angle	0.72° / 1Step	
Resolution	1, 2, 4, 5, 8, 10, 16, 20, 25, 40, 50, 80, 100, 125, 200, 250 division (0.72° to 0.00288° / 1Step)	
Input pulse width	Min. 0.5μs	
Pulse duty	50%	
Rising/Falling time	Max. each 120ns	
Max. input pulse frequency	1MHz	
Input voltage level	High : 4-8VDC, Low : 0-0.5VDC	
Input resistance	270Ω(CW, CCW). 390Ω(HOLD OFF)	
Environ-ment	Ambient temperature	0 to 40°C, storage: -20 to 60°C
	Ambient humidity	30 to 85%RH, storage: 30 to 85%RH
Approval	CE	
Unit weight	Approx. 292g	Approx. 411g

※1: When using over 30VDC, it should be mounted at ventilated place due to increasing heat.

※Environment resistance is rated at no freezing of condensation.

Multi-Axis 5-Phase Stepper motor Driver

◎ Function selection switch



NO	Name	Function	Switch position	
			ON	OFF
1	TEST	Self-diagnosis	Rotate in 30rpm	Not using
2	1/2 CLK	Pulse input method	1-pulse input	2-pulse input
3	C/D	Auto current down	Not using	Using

● TEST

- ※ Self-diagnosis function is to test motors and drivers.
 - ※ Motors rotate with 30 rpm in full-step. Motor rotation speed is subject to change depending on resolution setting.
 - ※ Rotation speed = 30 rpm / resolution
 - ※ The motor will rotate in CCW direction when in 1-pulse input mode and in CW direction when in 2-pulse input mode.
- Note) Make sure that TEST switch is set to OFF before supplying the power.
It may cause injury or danger if TEST switch is set to ON when power is supplied.

● 1/2 CLK

- ※ 1/2 CLK switch is to select pulse input mode.
- ※ 1-pulse input mode : CW → operation command pulse input, CCW → rotation direction pulse input
([H]: CW rotation, [L]: CCW rotation)
- ※ 2-pulse input mode : CW → CW direction rotation pulse input, CCW → CCW direction rotation pulse input

● C/D (Auto current down)

- ※ This function is reducing current automatically according to STOP current setting value in order to suppress generated heat when motor is stop.
- ※ After inputting the last pulse, current is decreased after approx. 500ms.

◎ RUN current setting



S/W No	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
Current (Arms/Phase)	0.4	0.5	0.57	0.63	0.71	0.77	0.84	0.9	0.96	1.02	1.09	1.15	1.22	1.27	1.33	1.4

- ※ RUN current is a phase current provided to 5-phase stepper motor.
 - ※ Be sure to set RUN current at the rated current or below.
 - ※ Adjust the RUN current in case severe heat generation occurs. Be sure that torque decreasing may occur when adjusting the current.
- Note) Be sure to adjust RUN current while motor is running.


◎ STOP current setting



S/W No	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
%	27	31	36	40	45	50	54	58	62	66	70	74	78	82	86	90

- ※ STOP current is a phase current provided to 5-phase stepper motor at standstill.
 - ※ It will be activated when C/D (Auto current down) is set to ON. By setting STOP current, it is possible to suppress the heat generation at motor standstill.
 - ※ STOP current setting value is the ratio of RUN current setting value (%).
- Ex) In case RUN current setting value is set to 1.4A and STOP current setting value is set to 50%, auto current down current is set to 0.7A.
- ※ STOP current setting value may have some deviation depending on resistance impedance of motor.
 - ※ Auto current down function will be activated when HOLD OFF signal is [L]. When HOLD OFF signal is [H], the function is not activated since the current provided to each phase is cut off.
- Note) Be sure to adjust STOP current while motor is at standstill.

◎ Zero point excitation output signal (ZERO OUT)[※Option]

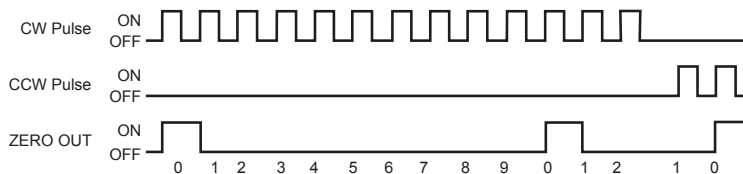

- ※ The signal is output to indicate when the motor excitation status is in the initial stage. / Used to check the rotation position of motor's axis.
 - ※ In case of full step, the signal is output every 7.2°. (50 times / rotation)
- EX) Full step (0.72°/Step): Signal is output every 10 pulses.
20 divisions (0.036°/Step): Signal is output every 200 pulses.

(A) Photo electric sensor
(B) Fiber optic sensor
(C) Door/Area sensor
(D) Proximity sensor
(E) Pressure sensor
(F) Rotary encoder
(G) Connector/Socket
(H) Temp. controller
(I) SSR/Power controller
(J) Counter
(K) Timer
(L) Panel meter
(M) Tacho/Speed/ Pulse meter
(N) Display unit
(O) Sensor controller
(P) Switching mode power supply
(Q) Stepper motor & Driver&Controller
(R) Graphic/Logic panel
(S) Field network device
(T) Software
(U) Other

MD5-HD14-2X, 3X

◎ HOLD OFF function

※When HOLD OFF input signal is [H], motor excitation is released.

When HOLD OFF input signal is [L], motor excitation is in a normal status.

※A function used to rotate motor's axis using external force or used for manual positioning.

※HOLD OFF Input signal [H] and [L] represent Photocoupler ON/OFF in a circuit.

※Please do not use for stopping motor.

◎ Setting microstep(Microstep : Resolution)

S/W No	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
Resolution	1	2	4	5	8	10	16	20	25	40	50	80	100	125	200	250
Step angle	0.72°	0.36°	0.18°	0.144°	0.09°	0.072°	0.045°	0.036°	0.0288°	0.018°	0.0144°	0.009°	0.0072°	0.00576°	0.0036°	0.00288°

● Resolution setting(Same as MS1, MS2)

※Microstep is to make basic step angle of 5-phase motors (0.72°) divided into smaller angle according to setting values.

※The formula for microstep angle is ;

$$\text{Motor revolution angle (5-phase motors)} = \frac{\text{Basic step angle}(0.72^\circ)}{\text{Resolution}}$$


※In case of geared motors, step angle shall be determined by dividing step angle by gear ratio.

EX) $0.72^\circ / 10 (1:10) = 0.072^\circ$

※It may cause step-out if resolution is changed while motor is running.

■ Input-Output diagram

<Inner circuit of MD5-HD14-2X/3X>

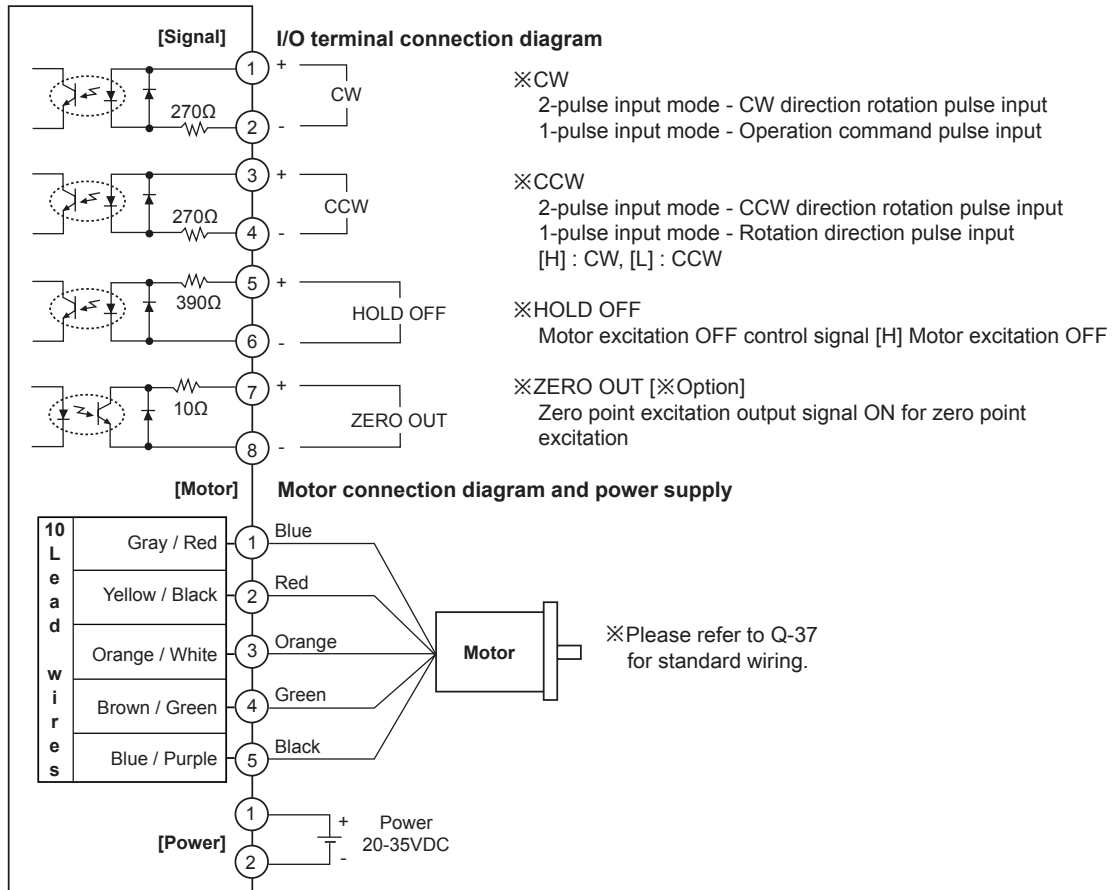

Note) Add external resistance when power for pulse from the external of the unit exceeds +5V. (Input current:10 to 20mA)


Note) 2/3-axis use power supply in common and input/output terminals are proportional to the number of axes of mode.

Multi-Axis 5-Phase Stepper motor Driver

■ Dimensions

(unit: mm)


◎ MD5-HD14-2X

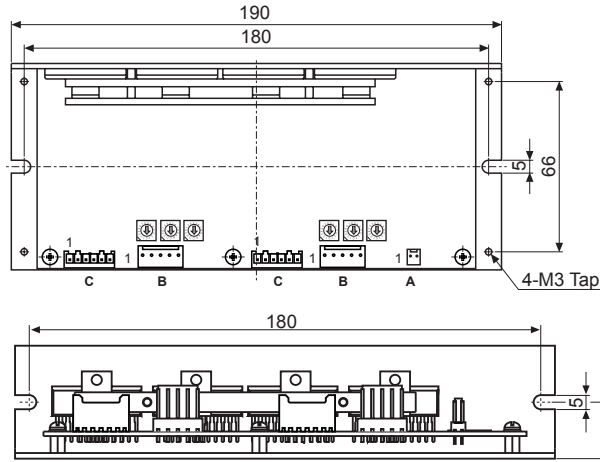

※Accessory connector specification

Accessory	Connector		Qty.
	Manufacturer	Model No.	
A Power 2P Housing	Yeonho electronics	YH396-02V	1
B Motor 5P Housing	Yeonho electronics	YH396-05V	2
C Signal 6P Housing	JST	XAP-0.6V-1	2
— Power/Motor Terminal Pin	Yeonho electronics	YT396	12
— Signal Terminal Pin	JST	SXA -001T-P0.6	12

◎ MD5-HD14-3X

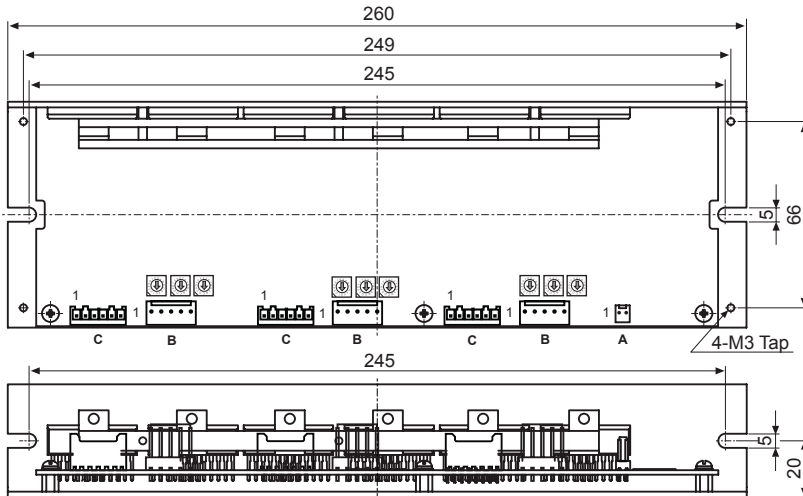

※Accessory connector specification

Accessory	Connector		Qty.
	Manufacturer	Model No.	
A Power 2P Housing	Yeonho electronics	YH396-02V	1
B Motor 5P Housing	Yeonho electronics	YH396-05V	3
C Signal 6P Housing	JST	XAP-0.6V-1	3
— Power/Motor Terminal Pin	Yeonho electronics	YT396	17
— Signal Terminal Pin	JST	SXA -001T-P0.6	18

- (A) Photo electric sensor
- (B) Fiber optic sensor
- (C) Door/Area sensor
- (D) Proximity sensor
- (E) Pressure sensor
- (F) Rotary encoder
- (G) Connector/Socket
- (H) Temp. controller
- (I) SSR/ Power controller
- (J) Counter
- (K) Timer
- (L) Panel meter
- (M) Tacho/ Speed/ Pulse meter
- (N) Display unit
- (O) Sensor controller
- (P) Switching mode power supply
- (Q) Stepper motor & Driver&Controller
- (R) Graphic/ Logic panel
- (S) Field network device
- (T) Software
- (U) Other